


OMRON

A Good Sense of Health


DIGITAL THERMOMETER

Please read the instructions carefully to ensure accurate temperatures and safe operation. When used properly, this high quality product will give you years of accurate, dependable service.

Models: MC-110B(C), MC-110B(F)
MC-111BW (Waterproof)

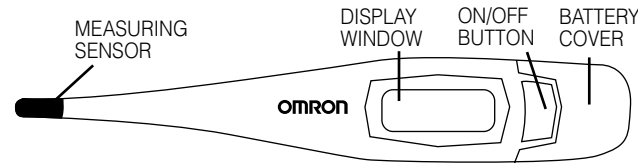

Model: MC-303BW (Flexible and Waterproof)

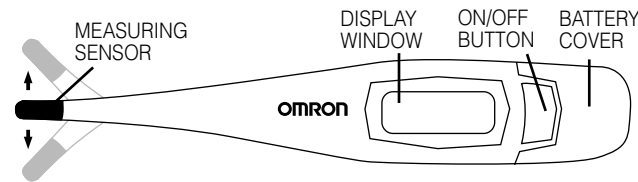

FLEXIBLE TIP: To avoid damage to probe do not bend beyond 45 degree angle as shown.

SAFETY INFORMATION:

- High, prolonged fever requires medical attention especially for young children. Please contact your doctor.
- Do not allow children to take their temperatures unattended.
- Read the enclosed instructions carefully to ensure accurate temperature readings. Temperature readings are affected by many factors including exercise, drinking hot or cold beverages prior to taking a reading as well as technique.
- Do not allow children to walk or run during temperature taking. The probe could present a hazard.
- Oral, underarm, and rectal temperatures vary by approximately 0.5°C (1°F).
- Keep battery away from children. Harmful if swallowed.**
- Do not open the thermometer except to replace the battery.

SPECIAL PRODUCT FEATURES:

- Beeps when reaches high temperature.
- Convenient MEMORY FEATURE.
- Low Battery indicator "∇".
- Includes 5 free probe covers.
- Oral, Rectal or Underarm use.
- Auto-Off in approximately 10 minutes.
- Long Life Replaceable Battery. (approximately 1500 temperatures)
- WATERPROOF..... for Easy Cleaning. (Only for MC-111BW & MC-303BW models)
- FLEXIBLE TIP for added comfort and safety. (Only for MC-303BW model)

PRECAUTIONS:


- Use of probe covers is recommended to help avoid spreading germs, and to keep the thermometer clean. The thermometer should be cleaned after use even when probe covers are used.
- Wipe/clean the thermometer using isopropyl alcohol or soap and water. For models MC-110B(C)/(F), never submerge in any liquids.
- Store the unit in the protective case while not in use.
- Do not store or keep in direct sunlight, or at high temperatures.
- Do not drop the thermometer, as this may damage the unit.

WHAT IS A "NORMAL" TEMPERATURE?:

Temperature readings vary in different individuals. A normal temperature refers to each individual's average temperature while they are well. Normal average temperatures range from 36.1°C/97°F to 37.8°C/100°F when taken orally.

HOW TO TAKE BODY TEMPERATURE:


1. Place a probe cover carefully over the tip (figure 1).
2. Push the on/off button located beside the display window. The thermometer will beep and the display will read: "188.8". This is a function check indicating the unit is working properly. Next the thermometer will read L °C. (or L °F for model MC-110B(F))
3. The °C symbol will continuously flash when the unit is ready to measure temperature. Please note that "∇" indicates a low battery. See instructions for replacing the battery before measuring temperature. Do not expect an accurate temperature reading if this low battery indicator is present. An "Err" message in the window indicates your unit is not functioning properly.
4. Select oral, underarm or rectal as your measurement site based on the individual.
5. When peak temperature is reached, the °C symbol will stop flashing, and the thermometer will beep repeatedly. Please note: **It is not necessary to hear the beep to ensure the peak temperature has been reached. When the °C symbol stops flashing and the display reads a consistent temperature, the peak temperature has been reached.**
6. Read and record the temperature and time for reference. The reading will automatically be stored in the memory.
7. Push the on/off button to turn the unit off. If you do not turn the unit off, it will shut off automatically in approximately 10 minutes.

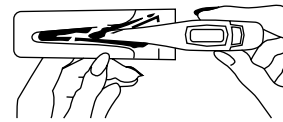

(figure 1)

ORAL USE: (for ages four years or older)


- Do not drink hot or cold fluids, exercise, smoke or perform other activities prior to a reading. These activities will raise or lower temperature readings when compared to your normal, average temperature. The mouth should remain closed up to 5 minutes before attempting a reading.
- Place the probe tip well under the tongue in locations as indicated by the "✓". (figure 2) Instruct children not to bite down on the probe and keep mouth closed during temperature measurement.
- The peak temperature should be reached in approximately 60 seconds. Opening the mouth or improper placement of the probe tip could result in a longer time for a reading.

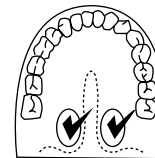

(figure 2)

UNDERARM (AXILLARY) USE:

- Wipe underarm with a dry towel.
- Place probe tip in armpit and bring arm down against the body (figure 3). The probe should be pointing upward in the same direction as your body if possible.
- The time required for an accurate underarm temperature may be 100 seconds or longer depending on placement of the probe and closure of the arm against the body.

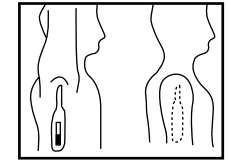

(figure 3)

RECTAL USE:


- Commonly used for babies, young children or when it is difficult to take an oral or underarm temperature.
- After placing the probe cover on the thermometer, lubricate with a water-soluble jelly or petroleum jelly.
- Gently insert the probe tip no more than 1/2 inch or 1.3 cm into the rectum. **Do not force the tip into rectum if resistance is encountered.**
- Dispose of the used probe cover and clean the thermometer as recommended.
- The peak temperature should be reached in approximately 60 seconds.

TO RECALL THE LAST TEMPERATURE:

1. Press and hold the power button while turning on the unit. The last measured temperature will be shown in the display with the letter "M" shown under the degree sign in approximately 3 seconds.
2. Release the power button. The thermometer will be in "ready-to-measure" mode and the recalled temperature will be erased. Note: If the device is switched off before completion of temperature taking, L °C will appear in memory the next time the unit is used.

CHANGING THE BATTERY:

When the "∇" appears in the lower right of the display, the battery is exhausted and needs replacing. Remove battery compartment lid and carefully slide out the battery holder. Insert new equivalent battery type (1.5v SR41). Ensure battery is correctly positioned with the "+" facing up or towards the front of the unit. Carefully replace the battery compartment lid. For models MC-111BW and MC-303BW, ensure "O" Ring (washer) is in place to maintain water resistance.

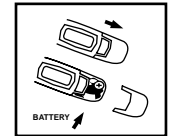

WARNING: KEEP BATTERY OUT OF CHILD'S REACH. SWALLOWING BATTERY COULD BE HARMFUL. BATTERY SHOULD NOT BE CHARGED OR PLACED INTO EXTREME HEAT AS IT MAY EXPLODE.

Measurement Range: 32.2°C to 43.2°C
90.0°F to 109.9°F [Model MC-110B(F)]
Measurement Accuracy: Centigrade: 0.1°C between 35.6°C to 41.1°C
±0.2°C at less than 35.6°C and greater than 41.1°C
Fahrenheit: 0.2°F between 96.0°F to 106.0°F
±0.5°F at less than 96°F and greater than 106°F. [Model MC-110B(F)]

OMRON Corporation

3-4-10, Toranomon, Minato-Ku, Tokyo 105-0001, Japan.

OMRON HEALTHCARE SINGAPORE PTE LTD.

83 Clemenceau Avenue, #11-01, UE Square, Singapore 239920.